


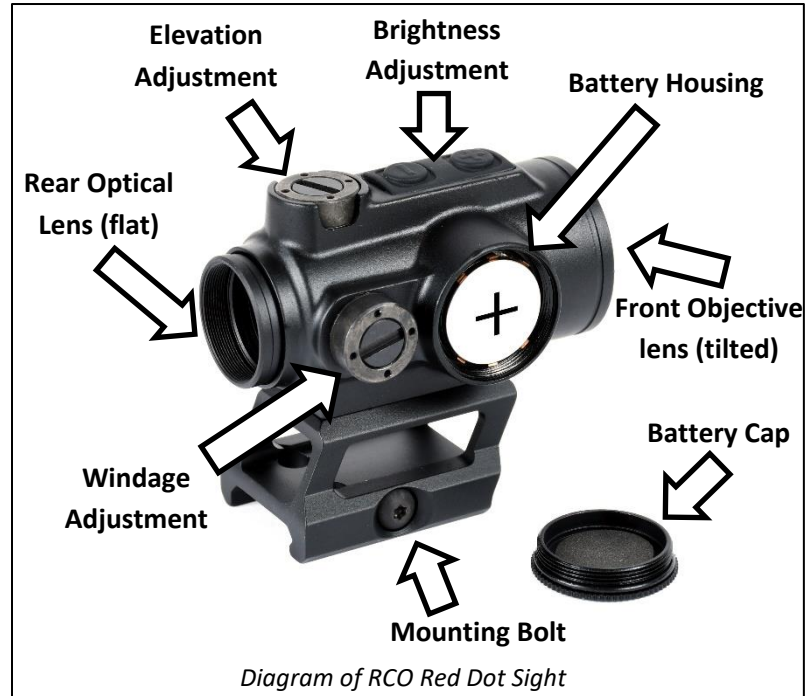

WARNING: Before attempting to install or maintain this red dot sight, assure that your weapon is unloaded and the weapon safety is in the "safe" position.

INSTALLING THE BATTERY

- Turn battery cap counter-clockwise to remove.
- Insert a battery with positive (+) end toward the cap (Battery type CR2032).
- Tighten battery cap by hand, or using a coin. Do not overtighten.
- **MOUNTING THE SIGHT**
- Loosen the mounting bolt, using the included torx wrench.
- Install the sight to the weapon rail by tightening the mounting bolt. Be sure the bolt is positioned in a rail slot for proper fit.
- To avoid overtightening, tighten the screw until you meet light resistance, and then tighten another ½ to ¾ turn (20 inch-lbs of torque).
- If you plan to leave the sight mounted permanently, we recommend using Blue Loctite on the mounting screw.



OPERATION & ZEROING

Operation: Press either the "+" or "-" button to turn on the sight and adjust the brightness to ambient lighting conditions. The first two settings are very dim for night vision compatibility, the upper 9 for normal lighting conditions. Hold both buttons for 3 seconds to power off. The sight will automatically turn off after 6 hours.

Windage adjustment: Turn side turret counter-clockwise to move point of impact right, clockwise to move point of impact left.

Elevation adjustment: Turn top turret counter-clockwise to move point of impact up, clockwise to move point of impact down.

Zeroing: The RCO is adjusted at ½ MOA increments (1/2 inch at 100 yards). We recommend a 50 yard zero for this product so that the bottom of the circle dot reticle can be used for short-range engagements (zero at 7 yards)

1. Turn on the sight and adjust for ambient conditions
2. Set up a target at 50 yards, and fire 3 shots on center.
3. Find the center of your points of impact and adjust point of impact for windage and elevation with a suitable tool (the end of a spent casing will do). At 50 yards, each "click" of adjustment will move the point of impact by roughly 1/4". So if your point of impact is 1" low, you would adjust elevation "up" by 4 clicks.
4. Continue steps 1 and 2 until your point of aim and point of impact are the same. Do not continue to adjust windage and elevation mechanisms if you encounter resistance – this can damage the sight.
5. Hold the "+" and "-" buttons for three seconds to shut sight off, and verify that your sight is still mounted securely to your weapon after zeroing.

WARRANTY

AT3 Tactical red dots sights come with a lifetime warranty. For full warranty details, visit at3tactical.com/warranty

If you have any issues or need a replacement, please contact us via email: support@at3tactical.com