

RED TAIL LOW POWER VARIABLE OPTIC INSTRUCTION SHEET



WARNING: Before attempting to install or maintain this product, assure that your weapon is unloaded and the weapon safety is in the "safe" position

MOUNTING THE SCOPE

- 1) First, remove the screws from the mount rings, and place the mount base on a secure, level surface.
- 2) Place the scope in the mount base and re-insert the screws in the mount rings, ensuring that the scope is level. Tighten opposite corners to ensure even pressure is distributed along the scope tube, to around 15 inch-lbs.
- 3) Place scope mount onto picatinny rail, tightening the thumbscrews until secure, or around 15-20 inch-lbs.

ZERDING PROCEDURE

- 1) To use bullet drop compensation, the scope must be zeroed in at 100 yards set up your target there.
- Find the center of your points of impact and adjust point of impact for windage and elevation, simply using your fingers to turn the windage and elevation adjustment knobs.

a.

 At 100 yards, each "click" of adjustment will move the point of impact by roughly 1/2". So if your point of impact is 1" low, adjust elevation "up" 2 clicks.

You may want to start at a closer range such as 25 yards to get your shots "on paper" before final zero at 100 yards.

USING ILLUMINATION

- Remove the cap from your Battery Compartment and install the included CR2032 battery, with the positive side facing outward.
- 2) Use the rotary dial to choose between 11 brightness settings, or simply turn to "0" to turn off illumination.

USING THE BDC RETICLE

The bullet drop compensation reticle is calibrated for use with 55 up to 62 grain projectiles for 5.56/.223 ammunition with a zero at 100 yards. Zero should be acquired using the tip of the chevron. Use the appropriate dot or hash mark for the range to your target to compensate for bullet drop at maximum magnification.


Scope Flevation Adiustment Objective Windage Throw Lever Adjustment Diopter Ring **Brightness** ATSTactic Adjustment/ Magnification **Battery Cap** Adjustment **Ocular Lens**





Torx wrench. Install throw lever by screwing in threads tight.

Warning: Do not remove the flat-head screw.

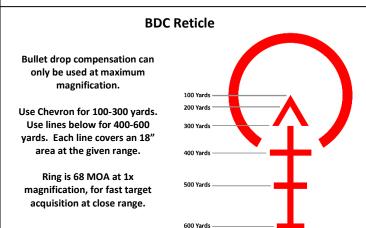

WARRANTY

AT3 Tactical products carry a lifetime warranty. Full details are available at at3tactical.com/warranty If you have any issues or need a replacement, please contact us via email: support@at3tactical.com